

RainBird Controllers Seasonable Adjust

RainBird model ESP-RZX Controller ===== Seasonable Adjust -90% to +100%
(Note ESP-RZX and ESP-RZT use the same Manual)

RainBird model ESP-RZT Controller ===== Seasonable Adjust -90% to +100%

RainBird model ESP-Me Controller ===== Seasonable Adjust 100% equals normal runtime.
5% to 200%

RainBird model ESP-TM2 Controller ===== Seasonable Adjust 100% equals normal runtime.
5% to 200%